

Industrial Tablet PC

Quick entry manual


Welcome to the industrial Tablet PC

This manual will show you how to use it and jacket extension function.

Standard configuration


Model	Unit	Model	Unit
Tablet	One	Manual	One
Charger	One	Card slot	One
Centre	One		
USB line	One		

Tablet's component introduction

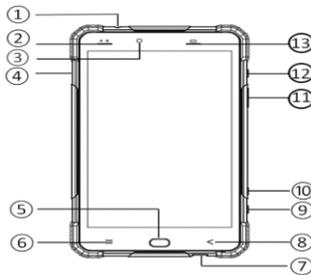

1. Headset jack
2. Pilot lamp
3. Front camera
4. Card slot


5. Home key+Fingerprint (optional)
 6. Menu key
 7. USB port
 8. Return key
 9. Scanning key
 10. Photo shortcuts key
 11. Volume key
 12. Power key
 13. Photosensitive
 14. Rear camera
 15. Flash lamp
 16. Scanner
 17. Bottom loudspeaker
 18. Wireless charging area
 19. Extended interface
 20. HF induction region
 21. Upper loudspeaker
 22. External GPS antenna interface
- *16, 18, 22 are optional

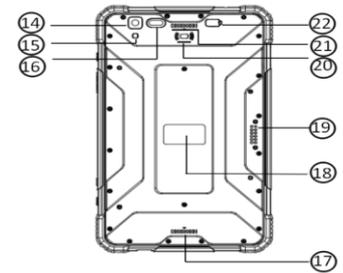

- Combination of Power key and Volume key: pressing two key at the same time for long time to get screenshot.

Introduction of Jacket parts (Optional)

1. 1D/2D barcode scanner
2. Smart card slot
3. Infrared transceiver
4. Laser transmitter

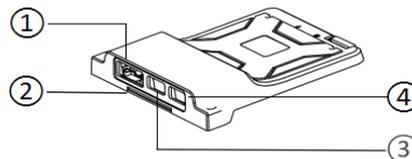

Introduction of Jacket functions (Optional)

- 1D/2D scanner: after the tablet installs the corresponding application software, it can read the bar code through the scanner.

- Smart card slot: after the tablet installs the corresponding application software, through inserting the smart card, the card can be read and written.
- Infrared optical transceiver: after the terminal is installed with the corresponding application, data communication and laser positioning can be realized by laser.
- Laser transmitter: after the terminal is installed with the corresponding application, data communication and laser positioning can be realized by laser.

Please read this manual before using this product and reserve it.

This manual is for reference only, the specific function and product picture may have the slight difference with the physical object, please take the material object as the standard.

Introduction of component function

- Photosensitive : automatically detect ambient light intensity and adjust screen brightness accordingly.
- Volume key: adjusting volume.
- Menu key: you can view applications running in the background.
- Power key: when turned off, you press button long can be turned on; the short click can extinguish the screen and still accept the call.
- Home key&Fingerprint : when an application is running, click this key to enable the application to run in the background. Fingerprint has fingerprint identification function, instead of password to unlock.
- Scanning key : after unlocking, press this key to quickly start the built-in scanning function.
- Photo shortcut key: pressing long time the key to start taking photos

Common Faults and Solutions

1. System hints can not install applications

- Confirm whether it matches the system
- Check memory capacity and do proper cleaning.

2. Unable to receive SMS and phone calls.

- Close the call and SMS interception function
- Restart or restore factory settings

3. Unable to identify SIM card.

- Wipe the SIM card sheet metal with an eraser.
- Reinstall SIM card
- Replacement of new cards

4. Tablet crash

- Long press the power button for more than 10 seconds, after the screen is black, then press the

power button for more than 4 seconds

5. Charging failure

- Confirm the connection status.
- When the battery is low, it does not display charging state. After charging for ten minutes, please disconnect the charger first and then reinsert the charger, the battery will be recharged.



! Be careful

- No disassembling equipment to prevent damage to equipment.
- Support standard Nano card. Cutting the card privately may damage the card or even damage the equipment.