

Bluetooth Barcode ScanJacket

User's Quick Guide

Thank you for using bluetooth barcode scanner products!

Please be sure to read the following methods, When you use our products for the first time.

- Optimal scanning distance

Bluetooth Barcode scanner products are divided into high density and low density models, where low density model of optimal scanning distance is 10~24cm. You scan a bar code to get this range bar code scanner is the best performance.

High density model's scanning distance is 3~7cm. It can read higher-density bar codes.

- Scanning techniques

Please aim at the middle part of the barcode through the red light to scan the barcode.

Please scan properly in accordance with the following diagram: connect the scanner angle appropriate to read the bar code, press a button, makes the Centre Red (blue) light coverage for all bar code decoding read.


Please do not use the following image error scan, otherwise will not be able to correctly read a bar code.

- Reset function

When you need to restore the original default settings, please press scan button more than 10 seconds. Then the scanner will automatically reset to the original settings. The default of initially set is Bluetooth connection.

1

Charging function	MS3391BT	MS3392BT
Interface	Standard MicroUSB	Standard MicroUSB
Requirements of Charging adapter	DC 5 v 0.15 A	DC 5 v 0.50 A
Time of Scanner Charging	3 - 5 hours	3 - 5 hours
Time of Handle Charging	3 - 5 hours	3 - 5 hours

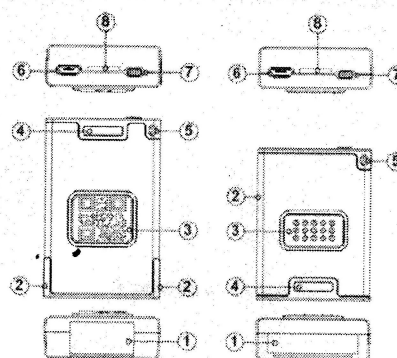

- Bar code reading window: for reading bar codes:
- Buzzer sound holes:
The beeper process has different instructions:
(1) Connect the USB cable, buzzer will beep "bb.b.":
(2) Properly decoded: flashing green light and buzzer synchronization/rings.
- Decode button: in level triggering and decode edge trigger, press the button to decode:
- Status display window: LED indicator descriptions
As shown in the table: the scanner light is red, green, and blue color transform, indicates a different scenario.

2

Data Transfer

Led descriptions	Meaning of representative
Scan green light flashing (with buzzer ringing)	Decode success
Scanner light flashes continuously (scan standby)	Low battery alarm
The scanner red light solid	In charge
Scanners often turn bright red light goes out	Charging is complete
Scanner light flashes continuously	Scanning built-in battery anomaly
Scanner continuously flashing blue	Enter the Bluetooth pairing mode
Scanner is changed from continuous flashing blue light goes out	Bluetooth link successful
Handle the red light solid	In charge
Handle the red light flashes continuously	Handle exception internal battery
Handle the green light solid	Charging is complete

- Strap hole: scanner may hang hanging by ropes in any place where you need, easy to carry and manage;
- MicroUSB interface through USB cable you can connect the scanner in the device with USB interface;
- Power switch: when you are not using the scanner, turn off the power, to save power are not exhausted;
- Fixed bayonet: used to clip the back of scanner and card collection.

- Data transfer

When you first use the MS3391BT Bluetooth barcode scanners, data transfer interface is default Bluetooth interface. Pairing you can directly connect a variety of smart-phones and computers with Bluetooth function.

- Bluetooth output

If you need to return to the Bluetooth output, you only need to press the scan button for 10 seconds to reset the Bluetooth output mode. Also can scan the bar code sets the output Bluetooth output mode.



Bluetooth output

3

Bluetooth pairing

If you need quick access to scan the device Bluetooth pairing mode, use the scanning equipment to scan read the following illustration of "Bluetooth pairing mode" bar code. Scanning devices in the pairing process will continue flashing blue, blue light goes out after the pairing is successful.



蓝牙配对模式

Bluetooth pairing mode

General process scanner to connect to other Bluetooth devices: connect devices having entered pairing mode → Bluetooth → search → paired Bluetooth device in the vicinity MS3391HID → connections → scan data.

- USB output

If you need to use a USB cable to connect the scanner, you need to set the output mode. Please scan the following barcodes:



USB output

- Serial output

If you need to use a serial cable connection to the scanner, you need to set the output mode. Please scan the following barcodes:



Serial output

4

● Mobile phone adapter

This adapter can stick on the back of your mobile phone protection case with 3M adhesive tape. You can attach MS3391BT barcode scanner on the adapter. So, you can handle with barcode scanner with mobile phone with one hand. Please fix Mobile phone adapter in the clip on the back of the scanner. The steps are shown in the following figure:



Install Scanner to the adapter



dismantle Scanner from adapter

5

Due to the internal cloud scanner comes with mass storage, can store up to 13,000 15 bits of data messages. Cloud scanner can scan a bar code on its own and stored in the built-in mass memory.

And you can use offline upload functionality, barcode data storage via Bluetooth or USB upload to your smart phone or computer.

Concrete implementation steps:

This note an offline scan stored procedure, for example, details the specific steps for implementation of offline scan feature:

(1) Scan "offline scan status open" bar codes as shown in Figure 1 to enter the offline scanning. The data you scanned will be stored in the scanning device.



Start Offline State

(2) The customer can connect to the computer through USB or Bluetooth interface or data terminal to upload the data.

If customers need to save the data stored in the file, open Notepad or similar software to enter the data.

If the customer wants to store data in a custom application, (such as submitted the bar code data into a application), refer the customer to the insertion point where you want to enter the data in the dialog box. Then bar code data entry and online scanning are in the same way.

Customers can choose different speed to upload the data according to your application. There are three different speeds for you: fast speed, middle speed and slow-speed upload.

- Fast Upload means upload data without time interval;
- Middle speed is to upload data the interval of 1 second;
- Slow upload refers to each interval of 3 seconds to upload the data.



Fast Upload

6

Offline Scan



Middle Speed Upload



Slow Speed Upload

(3) The customer can also scan the "statistics storage number" bar code to view the storage section, to check the upload data entry correct or not.



Statistical number of stores

(4) After the upload data, related applications will store the uploaded data. Data is stored in the scanner needs clear, please scan the barcode in Figure 6 to clear the data.



Clear the storage

(5) After the above steps, scan "offline scan status off" bar, ending the offline scanning stored procedure.



Stop Offline State



More barcode configuration content please

7

Installation of Handholder

● Handholder Installation

MS3391BT and MS3392BT can be installed on the Handholder. Installation method is shown in the following figure:

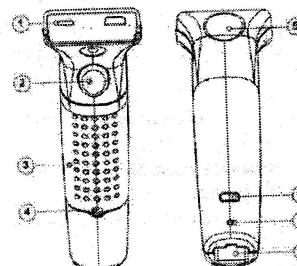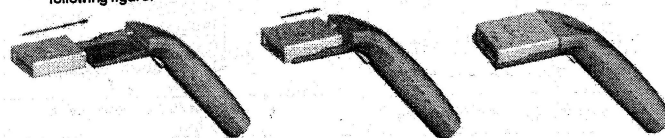

● The parts of handle:

- ① Micro USB interface for connection to the scanner;
- ② Decode button: trigger and decoding;
- ③ Replaceable battery compartment to accommodate plenty of rechargeable battery power from the scanner;
- ④ Battery door battery cover and screws: used to open and close the door;
- ⑤ Thumb ergonomic: convenience to scan;
- ⑥ Used to display the charging status;
- ⑦ Cable dismantling holes for RJ45 cable unplugged;
- ⑧ RJ45 cable jacks are used to connect RJ45 cable.

8